



## Starter Kit

User's Guide  
Warranty

### **When using the device for the first time**

Charging is required. Charge the device according to the procedure on page 17 before using.



0208001477

2.0

### Ploom Exclusive Customer Service

**Hours: 10:00 AM-9:00 PM (excluding  
year-end and New Year's holidays)**

 **0120-108-513**

You can also make an inquiry via the  
Ploom website.

<https://ploom.clubjt.jp/support/>



### Distributor

**Japan Tobacco Inc.**

4-1-1 Toranomon, Minato-ku,  
Tokyo 105-6927

# Table of Contents

Introduction .....	Page 3
Disclaimer .....	Page 4
Safety Information.....	Page 5
Confirming the Contents of the Kit.....	Page 15
Parts of the Device.....	Page 16

Troubleshooting .....	Page 35
Main Specifications .....	Page 40
Warranty.....	Page 41

<b>Charging .....</b>	<b>Page 17</b>
<b>“Taste Accelerator” .....</b>	<b>Page 21</b>
<b>Inserting a Stick.....</b>	<b>Page 23</b>
<b>Heating .....</b>	<b>Page 25</b>
<b>Use .....</b>	<b>Page 27</b>
<b>Shutting Off .....</b>	<b>Page 30</b>
<b>Cleaning.....</b>	<b>Page 32</b>
<b>Resetting .....</b>	<b>Page 34</b>

The content of this document may change without notice. The latest version of the User's Guide can be found on the Japan Tobacco website.



<https://ploom.clubjt.jp/userguide/s/>

# Introduction

Thank you for purchasing a Ploom S 2.0 Starter Kit (“Starter Kit”). Please read this document carefully to ensure safe use.

Ploom S 2.0 is a device that allows you to enjoy tobacco vapor<sup>1</sup> produced by heating Ploom S tobacco sticks using the built-in heater.

<sup>1</sup> “Tobacco vapor” is Japan Tobacco’s term for vapor containing tobacco-leaf derivatives.

Tobacco vapor<sup>1</sup> is produced by heating tobacco sticks using the built-in heater.



# Disclaimer

Japan Tobacco Inc. and stores selling this Starter Kit shall bear no liability or responsibility for direct or consequential damages resulting from improper use of this kit.

- Do not use this Starter Kit or Ploom S tobacco sticks for other than the intended purpose.
- Minors (under 20 years) are prohibited from purchasing or using this Starter Kit.
- When you use the device in a public place, observe the rules set by your local authority and facilities and show good manners.
- If you transfer this Starter Kit to a third party, be sure also to hand over this kit together with the User's Guide (this document).
- The specifications and external appearance of the products included with this Starter Kit may be changed without prior notice.

The User's Guide (this document) contains a printout of the Warranty (Page 41). After you read this guide, keep it in a handy place so that you can find it for future reference.

# Safety Information

Please read the following precautions carefully so that you can use the products such as the device included with this Starter Kit and other accessories in a safe and secure manner.

## Meanings of warning indications

### Levels of hazards and damages



If you do not follow the instructions indicated with this sign, you will face an imminent danger that will result in death or serious injury from fires, electric shocks, overheating, explosion, and other hazards.



If you do not follow the instructions indicated with this sign, you will face a possible danger that can result in death or serious injury from fires, electric shocks, and other hazards.



If you do not follow the instructions indicated with this sign, you may face a hazardous situation that can result in a minor or moderate injury from electric shocks or other accidents, or damage to property or items in the surrounding area.

### Specific caution signs



Explosion



Fire



Electric shock

### Prohibited action sign



Prohibited action

### Mandatory action sign



Mandatory action



Fire



Electric shock



Explosion



Prohibited  
action

**Do not expose the device and other accessories to fire or subject them to heat.**

Do not expose the device and other accessories to fire or attempt to heat them with matches, lighter or burner. Doing so might cause overheating, fire hazard or explosion.



Prohibited  
action

**Do not use, charge, or store the device and other accessories in a location exposed to oily smoke, steam flow, humidity, sand, or dust.**

Doing so might cause a fire or give you an electric shock.



Prohibited  
action

**Do not use the device and other accessories near flammable substances.**

Do not use the device and other accessories near flammable substances (such as benzene, thinner, spray, hairstyling products). Doing so might cause a fire or explosion.



Prohibited  
action

**Do not use, charge, or store the device and other accessories in a place with high temperature.**

Do not use, charge, or store the device and other accessories near a fire, heat generating devices, or heaters, in a place exposed to direct sunlight and high temperatures (such as inside a car in summer). Doing so might cause overheating, fire hazard or explosion.



Prohibited  
action

**Do not touch the device and other accessories while the device is being charged during a thunderstorm.**

If you touch the connected portion between the AC Adaptor and USB Type-C Cable or the device during a thunderstorm, this might give you an electric shock.



Mandatory  
action

**In the event of a malfunction or abnormal operation, immediately stop using or charging the device.**

Doing so might cause an unexpected accident or injury.



Prohibited  
action

**Do not clean the device during charging or heating, or immediately after use.**

Doing so might cause a malfunction, electric shocks, or an unexpected accident.



Prohibited  
action

**Do not use, charge, or store the device near water sources.**

Do not use the device near a kitchen sink, bathtub or washbowl, or store it in a place with high humidity. Doing so might cause the device to fall into water or exposed to excessive humidity, which might result in malfunction of the device, fire or electric shock. If the device gets wet, stop using it immediately.



Prohibited  
action

**Do not touch the AC Adaptor, device, or USB Type-C Cable with wet hands.**

If you plug or unplug the AC Adaptor or touch the device or USB Type-C Cable with wet hands, this might give you an electric shock.





Prohibited  
action

**Do not disassemble, modify  
or repair the device and other  
accessories.**

Doing so might cause an unexpected  
accident or injury.



Fire



Electric shock



Prohibited  
action

**Do not leave the device and other accessories within the reach of infants and children.**

Always store the device and other accessories such as tobacco sticks in a place out of reach of infants and children.

Failing to do so might cause an infant and child to accidentally ingest a tobacco stick. If infants or children accidentally ingest a tobacco stick, immediately seek medical attention.



Prohibited  
action

**Do not cover or wrap the device while it is being used or charged.**

Doing so might cause a fire or burns.



Prohibited  
action

**Do not touch the Tobacco Stick Holder or the heated portion of the tobacco stick during use or immediately after use.**

Doing so might cause burns.



Prohibited  
action

**Do not insert objects other than Ploom S tobacco sticks or cotton swabs into the device.**

Only insert Ploom S tobacco sticks or cotton swabs into the Tobacco Stick Holder of the device. If you insert other objects, they might cause an electric shock, malfunction or unexpected accident.



Prohibited  
action

**Do not use the device if the device or the tobacco vapor is extremely hot.**

Doing so might cause an unexpected injury, burns, or malfunction.



Prohibited  
action

**Do not use the device in an inappropriate manner other than the method described in this User's Guide.**

Doing so might cause an unexpected injury or malfunction.



**Periodically clean the AC Adaptor plug.**

Mandatory  
action

If dust or other contaminants accumulate in the plug of the AC Adaptor, this might cause a fire. After unplugging the AC Adaptor from the electrical outlet, periodically clean the plug with a dry cloth.



**When you charge the device, make sure there are no problems with the terminal portions, connection portions, or cable.**

Mandatory  
action

If there is dust, foreign matter, or moisture on the USB Type-C Jack of the device or connection portion of the AC Adaptor, or if the AC Adaptor or the cable is damaged, this may cause a short circuit or malfunction.



**To charge the device, make sure that the connectors and plugs are firmly connected.**

Mandatory  
action

 
If the USB Type-C Cable or AC Adaptor is not firmly connected, this might cause charging failure, or result in a fire, electric shock or malfunction.



**Ensure that individuals who need support do not use this product alone without the monitoring or direction of a person who is responsible for safety. Also, ensure that children do not use this product.**

Mandatory  
action

Otherwise, there is a risk of burns, electric shock, or injury.



Prohibited  
action

**Do not use the following devices or accessories unless they are the dedicated ones.**

- AC Adaptor
- USB Type-C Cable
- Tobacco sticks

Doing so might cause an unexpected injury or malfunction.



Prohibited  
action

**When you clean the device, do not use detergents, solvents, chemicals, volatile substances, compressed air, etc.**

Doing so may cause damage such as tarnishing or peeling of the coating, as well as unexpected malfunction.



Prohibited  
action

**Do not inhale or breathe into the tobacco stick set in the device with excessive force.**

Doing so might cause an unexpected injury, burns, or malfunction.



Prohibited  
action

**Do not touch the AC Adaptor and the device for an extended period while the device is being charged.**

Doing so might cause low-temperature burns.



Prohibited  
action

**Do not subject the device to a strong impact.**

If the device or other accessories are dropped or hit against another object and subjected to impact, this may damage them and cause an unexpected injury or malfunction.



Prohibited  
action

**Do not use the device and other accessories with the Cleaning Cover open.**

Doing so may cause an unexpected injury or burns.



**To charge the device, connect the parts in the correct order.**

Mandatory  
action

Failing to do so might cause an unexpected accident or malfunction. (For the correct order to connect the parts, see Page 17.)



**Hold the AC Adaptor firmly when you unplug it from the electrical outlet.**

Mandatory  
action

If you hold the USB Type-C Cable to pull out the AC Adaptor, this might cause cable line breakage or unexpected malfunction of the AC Adaptor. Be sure to hold the AC Adaptor when you unplug it from the electrical outlet.



**Hold the connector firmly when you unplug the USB Type-C Cable.**

Mandatory  
action

When you unplug the USB Type-C Cable, be sure to hold the connector firmly. If you unplug the USB Type-C Cable by holding the device or cable portion, this might cause a malfunction such as line breakage of the cable.

## Precautions on the lithium-ion battery

The Ploom S 2.0 device has a built-in lithium-ion battery. To avoid battery fluid leakage or explosion and serious injury caused by overheating or a fire hazard, be sure to observe the following precautions so that you use the device in a safe and secure manner.



Prohibited  
action

**If the battery fluid leaks, do not touch the device with bare hands.**

- If you get the fluid into your eyes, this might cause loss of vision. Do not rub your eyes and wash them immediately with running water. After that, immediately seek medical attention.
- If the fluid adheres to clothes or skin, this might cause burns or inflammation. If you experience symptoms such as burns or inflammation after rinsing with water, seek medical attention.



Explosion



Fire




Mandatory  
action

**If you notice any battery fluid leakage or abnormal smell, immediately remove the device away from a fire source.**


If you continue to use the device near a fire source, this might result in ignition of the leaked battery fluid, causing a risk of explosion or fire.



 **Do not charge, use, leave or store the device in extremely high temperatures or low temperatures.**

Prohibited action

Doing so might accelerate degradation of the built-in battery. Also, do not store the device in high-temperature and high-humidity environments.

 **Do not burn the device or other accessories.**

Prohibited action

It is highly dangerous to burn the device or other accessories since they are made of materials such as metal and plastic.

## Precautions on disposal of products no longer used



The Ploom S 2.0 device has a built-in lithium-ion battery. The device, AC Adaptor and USB Type-C Cable are made of materials such as metal and plastic. When you dispose of them, be sure to follow the regulations of each local authority.

# Confirming the Contents of the Kit

Before use, please ensure that the contents of your kit match those listed below. If anything is missing, please contact “Ploom Exclusive Customer Service” (back cover).

Device



AC Adaptor



USB Type-C™ Cable  
(USB-A - USB-C™)



User's Guide/Warranty  
(This document)



 
**About separately  
sold accessories and  
products**

.....  
To use Ploom S 2.0,  
“tobacco sticks”  
(sold separately) are  
necessary.

- USB Type-C™ and USB-C™ are trademarks of USB Implementers Forum.
- Other documents may be included such as a leaflet about Ploom S 2.0.




# Parts of the Device

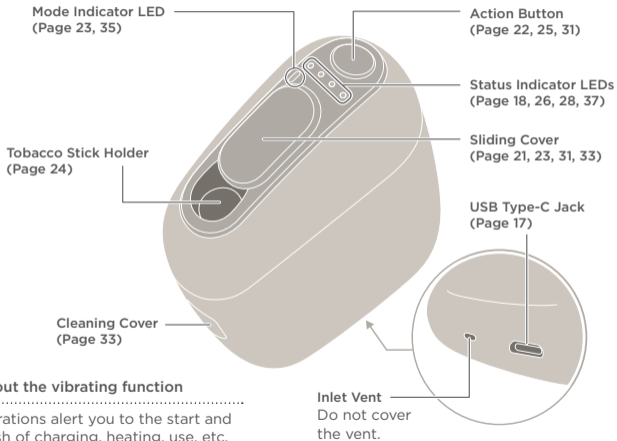


# Charging

 Charging is necessary when you use the device for the first time after purchase. Without charging, the device will not turn on.

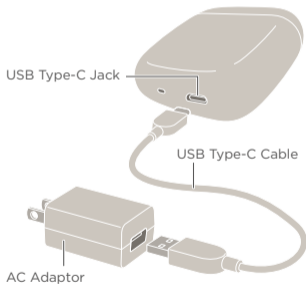


## 1 Start charging.

 

Connect the USB Type-C Cable to the device and to the AC Adaptor. Insert the AC Adaptor into an electrical outlet.

## Start of Charging
 
### First Time



All of the LEDs flash.



The device vibrates four times to alert you that charging has started.

### After First Time



The device vibrates once to alert you that charging has started.

## During Charging



The Status Indicator LEDs flash/light up one by one as charging progresses.



## Charging Complete



When all of the Status Indicator LEDs are lit up, the battery has charged up to 90%, which will allow you to use about 20 tobacco sticks.



Once all of the Status Indicator LEDs are turned off, charging is complete.

- Fully charging the battery takes about 90 minutes. The battery will charge to about 90% in 60 minutes<sup>\*1,2</sup>. (When using the dedicated AC Adaptor and USB Type-C Cable)

### Approximate charging time and number of usable sticks<sup>\*1,2</sup>

Charging Time	Number of usable sticks
60 minutes	About 20 sticks
90 minutes	About 22 sticks

- <sup>\*1</sup> The charging time and the number of usable sticks may increase or decrease depending on the deterioration of the battery, ambient temperature, etc.
- <sup>\*2</sup> Charging may take a longer time after the device has been left unused for a long period of time.

## How to check the remaining battery level and timing of charging

- To check the remaining battery level, briefly press the Action Button while the Sliding Cover is closed. You cannot check the remaining battery level during heating or use.
- If the first Status Indicator LED is flashing slowly, this means that the remaining battery level is extremely low. Charging is recommended. If the LED is flashing rapidly, the battery is depleted and you cannot use the device. Please charge the battery (Page 17).



# “Taste Accelerator”

 
Switch the “Taste Accelerator” on or off to select the strength of the taste.

## “Taste Accelerator”

**On:** Strong taste (default setting)

**Off:** Mild taste (the same strength as the product released in 2019)

If you prefer not to change the setting, proceed to “Inserting a Stick” (Page 23).

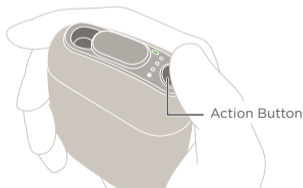

## 1 Open the Sliding Cover.



The device will turn on.



The Mode Indicator LED will light up in green<sup>1</sup>.

<sup>1</sup> The Mode Indicator LED lights up in green when the “Taste Accelerator” is turned on, and in blue when it is turned off. The instructions in this User’s Guide assume that the “Taste Accelerator” is turned on (default setting).

- If the Mode Indicator LED does not light up when you open the Sliding Cover, the remaining battery level is extremely low. Please charge the battery (Page 17).

## 2 Change the “Taste Accelerator” setting.



Press the Action Button three times in quick succession.



The device will vibrate for a few seconds to alert you that the “Taste Accelerator” setting has changed.

**When set to off:**



The Mode Indicator LED lights up in blue.

**When set to on:**

 


The Mode Indicator LED lights up in green.

- If the “Taste Accelerator” setting does not change, see “The “Taste Accelerator” setting cannot be changed.” (Page 39).

# Inserting a Stick

Only use never-before-used tobacco sticks.

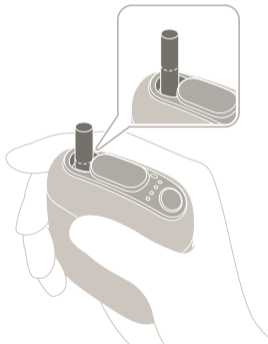

## 1 Open the Sliding Cover.



The device will turn on.



The Mode Indicator LED will light up in green<sup>\*1</sup>.

- <sup>\*1</sup> The Mode Indicator LED lights up in green when the “Taste Accelerator” (Page 21) is turned on, and in blue when it is turned off. The instructions in this User’s Guide assume that the “Taste Accelerator” is turned on (default setting).
- If the Mode Indicator LED does not light up when you open the Sliding Cover, the remaining battery level is extremely low. Please charge the battery (Page 17).



## 2 Insert a tobacco stick.



Slowly insert the tobacco stick with the leaves down until the tip lightly touches the bottom. Make sure that the dotted-line portion of the stick is not covered.

To prevent hot air from leaking out through the opening, make sure that the Cleaning Cover is closed before use.

- Reusing tobacco sticks will result in an inferior flavor and aroma. Only use never-before-used tobacco sticks.
- Never insert tobacco sticks with the leaves up. Doing so may cause a malfunction.
- Never use wet or damp tobacco sticks.

# Heating

The heater built into the device heats the tobacco stick.

Never remove a tobacco stick while the heater is operating.



## 1 Start heating.



Hold down the Action Button for at least two seconds.



The device will vibrate once.

## During Heating



The Status Indicator LEDs flash and heating starts. The LEDs flash/light up as heating progresses. Heating takes about 30 seconds to complete.



## Ready for Use



Once all of the LEDs are lit up, the device is ready.



The device will vibrate twice to alert you that heating is complete.

You can now enjoy the flavor and aroma of the tobacco stick.

- The heating time may vary depending on the usage environment.

# Use

After each session of heating, you can use the device for about 4 minutes and 30 seconds, or about 14 puffs<sup>1</sup>. If there is enough battery power remaining, you can then heat (Page 25) another stick and continue using the device<sup>2</sup>.

<sup>1</sup> One cycle of inhalation and exhalation is counted as one puff. The maximum number of puffs may vary depending on how deeply you inhale, and the usage environment.

<sup>2</sup> Continuous use may not be possible if the temperature of the heater is too high.

Never remove a tobacco stick while the heater is operating.



If the tobacco vapor comes into contact with your lips when you begin to inhale, the tobacco vapor may feel hot. Hold the tobacco stick deep inside your mouth.

## Start of Use



The remaining time is indicated by the Status Indicator LEDs.



## Alerts before Heater Shutdown



About 30 seconds left/  
About 2 puffs left (the LED flashes)



When there are only about 30 seconds or two puffs left, the device vibrates once to alert you that the heater will shut off soon.

- If you want to stop using the device in the middle of a session, shut it off correctly according to the procedure under “To stop using the device in the middle of a session (shutting the heater off)” (Page 31).
- Even when there is plenty of time remaining, if there are only two puffs left, the LEDs will flash and the device will vibrate.

## Heater Shutdown



When the maximum time (about 4 minutes and 30 seconds) has elapsed, the device vibrates twice.



When you have puffed the maximum number of times (14 puffs<sup>1</sup>), the device vibrates three times.

 


All of the Status Indicator LEDs turn off and the heater shuts off.

<sup>1</sup> One cycle of inhalation and exhalation is counted as one puff. The maximum number of puffs may vary depending on how deeply you inhale, and the usage environment.

# Shutting Off

Make sure that all of the Status Indicator LEDs are turned off.

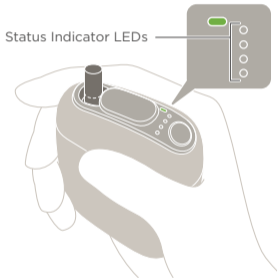

## 1 Remove the tobacco stick.



Hold the tobacco stick by the tip, and pull it straight out.

- Tobacco sticks turn light brown after use. This is normal and does not indicate a problem with the tobacco stick or the device.

## 2 Close the Sliding Cover.



The device will turn off.

- Make sure that the Sliding Cover is tightly closed to avoid accidental operation when carrying the device around.
- Tobacco sticks are very hot after use. Always place tobacco sticks in an ashtray immediately after use.
- Dispose of used tobacco sticks properly to keep them out of sight of infants and children.

### To stop using the device in the middle of a session (shutting the heater off)

---



Hold down the Action Button for at least two seconds.



The heater will shut off and the device will vibrate twice.

 
Make sure that all of the Status Indicator LEDs are turned off, and then remove the tobacco stick. If you simply remove the tobacco stick during heating, the heater will not shut off.



# Cleaning

Cleaning is recommended whenever you notice any foreign particles, stains, etc.

- \* Use commercially available thin cotton swabs.
- \* Make sure that the cotton swabs are dry. Using detergents, solvents, or water may cause an unexpected malfunction.

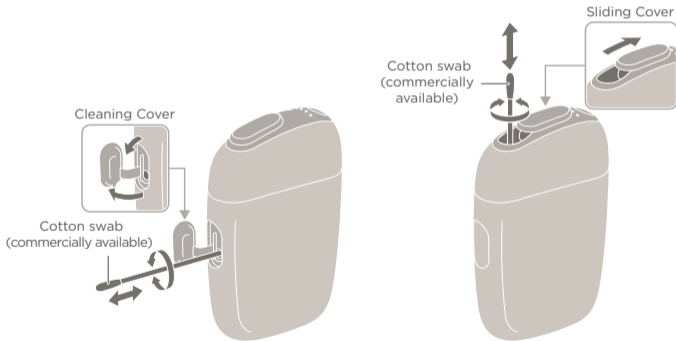

## **1 Open the Cleaning Cover and Sliding Cover.**

## **2 Perform cleaning.**

Insert a cotton swab into the Tobacco Stick Holder and perform cleaning.

## **3 Close the Cleaning Cover and Sliding Cover.**

After cleaning is finished, pull out the cotton swab. Close the Cleaning Cover and Sliding Cover. Insert the connecting portion of the Cleaning Cover straight in. The connecting portion may break if you insert it forcibly or at an angle.

- The device retains heat for a short time after use. Let the device cool off before performing cleaning.
- Never attempt to remove fragments of tobacco leaves by forcefully hitting or shaking the device. Doing so may cause a malfunction.
- Only use cotton swabs for cleaning.

# Resetting

If the device is not working properly, try resetting it. This may resolve the issue.



Hold down the Action Button for at least ten seconds.



All of the LEDs flash and the device vibrates three times.

The device will reset.

- You cannot reset the device unless you charge the device at least once.

# Troubleshooting

If the device is not working properly or acting strangely, try resetting it (Page 34). This may resolve the issue.

If resetting does not resolve the issue, check the following items.

**The Mode Indicator LED is lit up in red.**

See “Resetting” (Page 34) and try resetting the device. If this does not resolve the issue, check the content of the Warranty (Page 41), and then contact “Ploom Exclusive Customer Service” (back cover).



**The Mode Indicator LED is flashing in orange.**

This means that the device cannot be used temporarily because it has become too hot (or too cold) due to its current status, the ambient environment, etc. Wait until the Mode Indicator LED turns off before using the device again.



## The device is too hot to hold.

The device may be malfunctioning. Please contact “Ploom Exclusive Customer Service” (back cover).

The device may become somewhat hot after continuous use due to extended use of the heater. However, this is not a malfunction.

## When you open the Sliding Cover, the LEDs do not light up.

The battery is depleted. Please charge the battery (Page 17). If charging does not resolve the issue, there may be a malfunction. Please contact “Ploom Exclusive Customer Service” (back cover).



## The device doesn't work.

The device will not work if the battery is depleted. Please charge the battery (Page 17). The device may also fail to work if it is too cold due to the external temperature, etc. Wait for the device to return to a normal temperature.

## When you try to charge the battery, all of the LEDs flash continuously.

This error may occur when the battery is completely depleted (the LEDs will not light up even when you hold down the Action Button with the Sliding Cover closed) and you try to charge it using a product other than the dedicated AC Adaptor and USB Type-C Cable. The device will not charge under these conditions. Charge the battery using the dedicated AC Adaptor and USB Type-C Cable.



## When you check the remaining battery level, one of the Status Indicator LEDs flashes.

If the LED is flashing slowly, this means that the remaining battery level is extremely low. Charging is recommended. If the LED is flashing rapidly, the battery is depleted and you cannot use the device. Please charge the battery (Page 17).

If charging does not resolve the issue, there may be a malfunction. Discontinue use of the device and contact “Ploom Exclusive Customer Service” (back cover).



## You have been charging the battery for a long time, but not all of the Status Indicator LEDs are lit up yet.

- Charge the battery using the dedicated AC Adaptor. If you use a product other than the dedicated AC Adaptor, charging may take a long time.
- Check for dirt on the USB Type-C Jack of the device, the connectors of the USB Type-C Cable, or the USB jack of the AC Adaptor. If they are dirty, wipe them off with a soft, dry cloth. Then, reconnect them and try charging again.
- If they are not dirty, there may be an issue with the device, AC Adaptor, or USB Type-C Cable. Please contact “Ploom Exclusive Customer Service” (back cover).
- Do not use products other than the dedicated AC Adaptor and USB Type-C Cable. Doing so may cause an unexpected injury or malfunction.

### **The battery becomes depleted immediately, even after it is charged correctly.**

- If the battery life has become significantly shortened, the battery may have deteriorated to the point that it is nearing the end of its lifespan. It is time to purchase a replacement.
- The battery may become depleted immediately if the device is too cold due to the external temperature, etc. Wait for the device to return to a normal temperature before charging.

### **The device will not turn on after it was left unused for a long period of time.**

When you leave the device unused for long periods of time, the battery voltage decreases due to self-discharge. Charge the battery before using the device again.

### **The device vibrates four times even though it is not being charged for the first time.**

When you leave the device unused for long periods of time, the battery voltage decreases due to self-discharge, and the device may return to the default mode (the state at the time of purchase). In this case, if you charge the device, it will vibrate four times as if being charged for the first time. This is not a malfunction.

### **When you begin to inhale, the tobacco vapor is hot.**

- When you begin to inhale, the tobacco vapor may be somewhat hot due to use of the heater. However, this is not a malfunction.
- The heated tobacco vapor may feel hot if it comes into contact with your lips. Hold the tobacco stick deep inside your mouth.

## **The “Taste Accelerator” setting cannot be changed.**

- Press the Action Button three times in quick succession. The setting will not change if you do not press the Action Button quickly enough.
- The “Taste Accelerator” setting will not change in the following cases.
  - The Sliding Cover is open, and the Mode Indicator LED is turned off.
  - The first Status Indicator LED is flashing rapidly. (You cannot heat up any tobacco sticks.)

## **When you close the Sliding Cover, the device vibrates.**

The device vibrates twice to alert you that the heater has shut off.

Never remove a tobacco stick while the heater is operating. When you stop using the device, make sure that the heater is shut off (all of the Status Indicator LEDs are turned off). Then, remove the tobacco stick and close the Sliding Cover.



# Main Specifications

## Device

Battery Type	Lithium-ion battery
Battery Capacity	1,880 mAh
Charging Time	Approx. 90 minutes
Input Terminal	USB jack (USB Type-C)
Dimensions	Approx. 56 mm × 93 mm × 25 mm (W / H / D)
Weight	Approx. 106 g
Operational Temperature Range	5 °C – 35 °C (during charging) 5 °C – 35 °C (during use)

## AC Adaptor

Model Name	WA-SJPT12-JA
Rated Input	AC 100 V – 240 V, 50/60 Hz, 0.2 A
Rated Output	DC 5 V, 1.5 A
Dimensions	Approx. 32 mm × 60 mm × 23 mm (W / H / D)
Weight	Approx. 32 g

## USB Type-C Cable

Dimensions	Approx. 60 cm
Weight	Approx. 18 g

For information on purchasing separately sold accessories such as the AC Adaptor, please visit our website below.



<https://ploom.clubjt.jp/>

# Warranty

To request a product exchange, carefully read the following content and then contact “Ploom Exclusive Customer Service” (back cover).

\* THIS WARRANTY IS VALID FOR ONLY IN JAPAN.

## Warranty Period

The terms of this Warranty apply to the following products included in the Ploom S 2.0 Starter Kit for eighteen months from the date of purchase.

- Ploom S 2.0 Device
- USB Type-C Cable
- AC Adaptor

## Scope of Warranty

- If a malfunction occurs while you are using the Ploom S 2.0 Starter Kit in accordance with this document (User’s Guide) or due to a manufacturing defect, you may exchange the product free of cost. Please note that if yours is a limited edition product, we may not be able to replace it with the same version.

- Free product exchanges under the terms of this Warranty are subject to the warranty period as of the time of the initial purchase.
- The terms of this Warranty only apply to products purchased in Japan.

#### Stipulation of Exceptions to Warranty

The terms of this Warranty do not apply in the following cases.

- The user cannot produce the Warranty.
- There is no proof of purchase.
- Damage is superficial and has no effect on the product's performance (scratches, dents, damage to the plastic parts, etc.).
- Failure is the result of combination with an incompatible product.
- The product has been obviously disassembled or modified.
- Deterioration of the product is the result of normal use.

- The user failed to comply with the indications of “Safety Information” or the usage instructions in this document.
- The warranty period has expired.

### Exchange Procedure

If you require a replacement, please contact “Ploom Exclusive Customer Service” (back cover) for an explanation of the free exchange procedure.

- The product must be within the warranty period.
- You must provide proof of the warranty period.
- The shipping destination for replacements is limited to addresses in Japan.

## Other

- When a product is exchanged free of cost, it will be replaced with a product equivalent to the one that you purchased. Please note that the recovered product will not be returned to you.
- Please note that we do not provide this Warranty to customers who are deemed to be part of anti-social forces.

